



**1. Front Body** (Front Body, installation on the outside of the door)

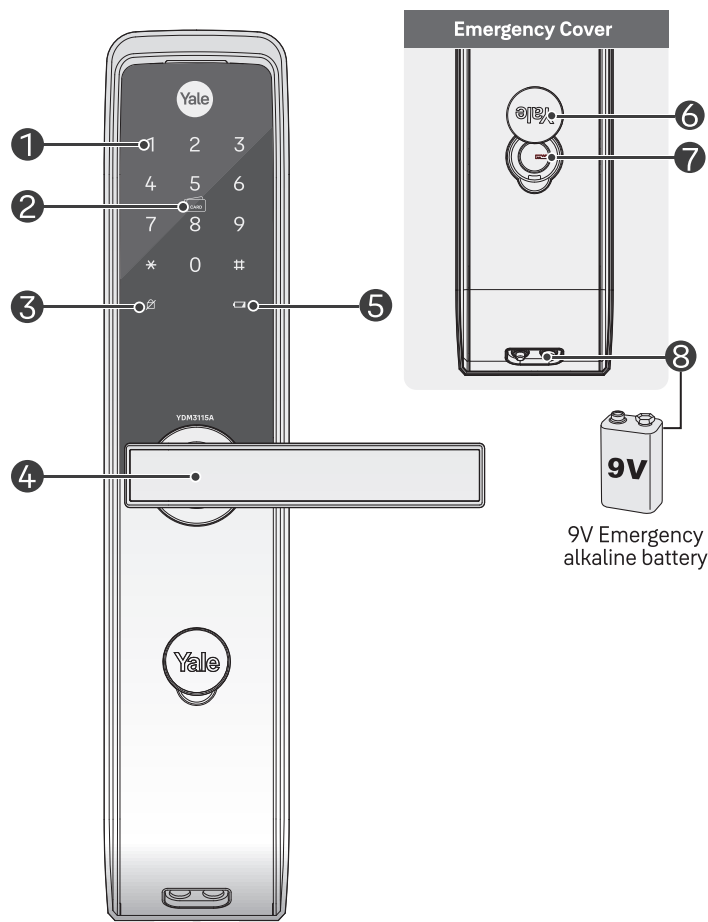

**4. Main Body** (Main Body, installation on the inside of the door)

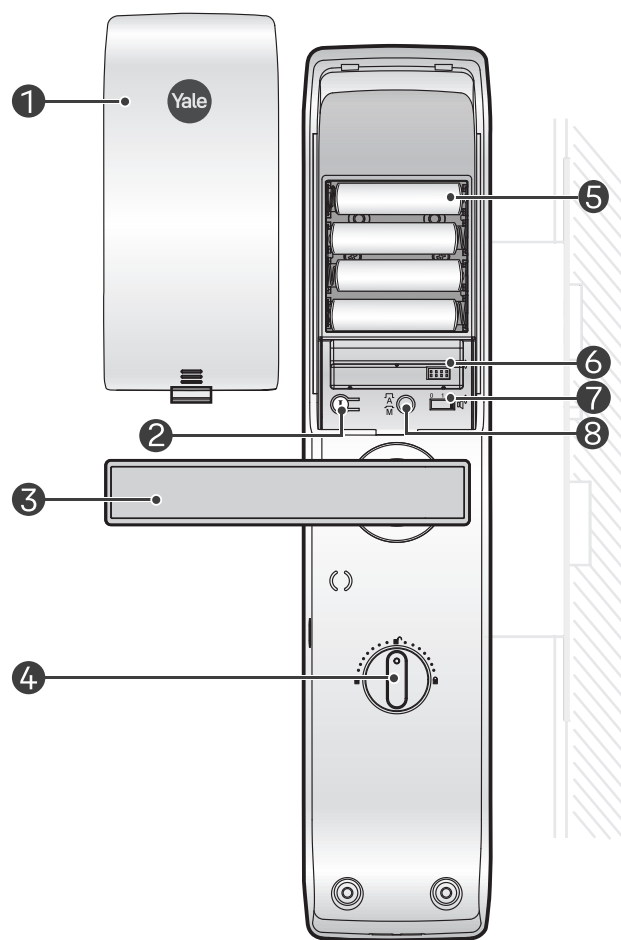

**2. Basic Contents**

**Basic Contents**

- Front Body
- Main Body
- Lock Case

**Optional Accessories**

- User Manual
- Installation Guide
- AA Batteries X 4
- RFID Key Tags X 4
- Mechanical Keys
- Screws
- Remote Controller
- Remote Control Module
- Bluetooth Module

**3. Specifications**

Parts	Specifications	Remarks
Front Body	72(W) X 344(H) X 30(D) mm	Operating temperature -15~55°C (5~131°F)
Main Body	72(W) X 344(H) X 36(D) mm	
Lever	Zinc die-casting	
Card Keys	4 EA	Up to 100 keys
Works for	4EA 1.5V AA Alkaline batteries (Operating voltage: 4.5~6V)	Last up to 10 months (10 times used a day)
Lock Case	Steel and SUS304	
Option Remote Control	Wireless	Optional

※ Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of battery used.  
 ※ Please make sure that all parts are included when purchasing the product.  
 ※ Optional products may not be available depending on you country or local dealer.

**7. Setting Menu**

**Master Mode:** Only a designated person who knows 'Master PIN Code' has authority to set features.  
**Normal Mode:** If no user is assigned with master code without a designated person, anyone who knows 'User PIN Code' has authority to set features.  
**Visitor Code:** Users with Visitor Code can only open the door with no access to change settings.  
**Onetime Code:** The onetime code is used only once for unlocking the door lock and automatically deleted after usage.  
**User Slot Number:** It should be 2 digits(like '01', '02'...'99', '00') and available in advanced mode.

	Touch the Keypad of the Front Body with your palm to begin
	Press * button on the Keypad
	Press # button on the Keypad
	Press (Registration) button in every steps to start or complete the session
	Enter User RFID Key Tag (Up to 100 Users)
	Enter User Code (4 ~ 10 digits)
	Enter Master Code (4 ~ 10 digits)
	Enter Visitor Code (Only 4 digits)
	Enter Onetime Code (Only 4 digits)
	User Slot Number should be 2 digits (like '01'...'99' and '00'. Location of 100th user slot must be assigned "00" instead of "100".)
	Rotation area to add more features

**5. Front Body**

1	Keypad(10-key)
2	RFID Key Tag reader
3	Dead Bolt Jam Lamp
4	Lever
5	Low Battery Indicator
6	Emergency Cover
7	Emergency Mechanical Key Slot
8	Emergency Power Supply Terminal

**6. Main Body**

1	Battery Cover
2	(Registration) button
3	Lever
4	Manual Thumb Turn
5	1.5V AA Alkaline Batteries (4PCS)
6	Module Accessory Slot (Optional)
7	Volume Control Switch
8	Auto/Manual Lock Button

**8. Product Features**

**Yale Access App**  
 Yale Access gives you the peace of mind of knowing who and what you love is safe - no matter where you are- just at the touch of your smartphone.

**Smart Touchpad – Auto Lock**  
 The door Locks when you touch the palm on the keypad.

**3 minute Lock Out Feature**  
 After five (5) unsuccessful attempts of an invalid code or RFID key tag, lock out mode is activated for 3 minutes.

**Smart Etiquette**  
 When entering a pin code on the keypad, the user can open the door lock in silent mode.

**Fake PIN Code**  
 Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

**Internal Forced Lock**  
 It is a security-enhancing function that 'disables' authentication methods such as passwords and RFID key tags from outside when setting up functions indoors.

**External Forced Lock**  
 It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.

**Other features and Benefits**

- Remote Controller (Optional): This option may not be available depending on your country or local dealer.
- Network Module/Controller (Optional): It allows door lock to connect with Home network controller.
- Intrusion/Broken Alarm.
- Low Battery Alarm and Emergency Power Supply.

**9. Normal Mode (Default Mode)**

Normal mode is for convenient mode for anyone with user code to change various settings.

1 → 12 (Registration process) \* Continue / (Complete)

	1	2	3	4	5	6	7	8	9	10	11	12
--	---	---	---	---	---	---	---	---	---	----	----	----

**User Code** (Only 1 User)

Registr-ation: (Registration) (U PIN CODE New)

**RFID Key Tag** (Up to 100 Users)

Registr-ation: (Registration) (CARD) (Registration)

**Visitor Code** (Only 1 User)

Registr-ation: (U PIN CODE) (Registration) (1 #) (V PIN CODE #) (\* OR (Registration))

Delete: (U PIN CODE) (Registration) (3 #) (U PIN CODE #) (\* OR (Registration))

**Onetime Code** (Only 1 User, Automatically deleted after use)


Registr-ation: (U PIN CODE) (Registration) (2 #) (1 #) (0 #) (\* OR (Registration))

Delete: (U PIN CODE) (Registration) (3 #) (U PIN CODE #) (\* OR (Registration))

**Delete ALL RFID Key Tag credentials**

Delete: (U PIN CODE) (Registration) (3 #) (U PIN CODE #) (\* OR (Registration))


**10. Unlocking Door with Code**

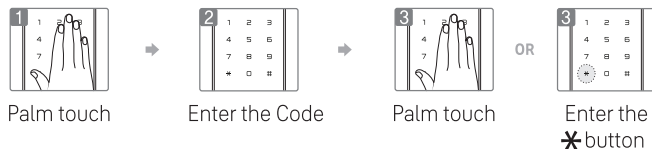


**11. Unlocking Door with RFID Key Tag**



**12. Opening Door(Inside/Outside)**

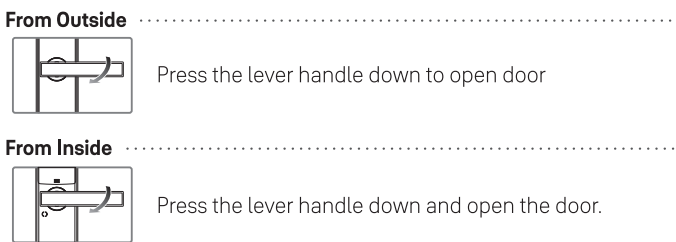

**13. Unlocking Door with Smart Etiquette**

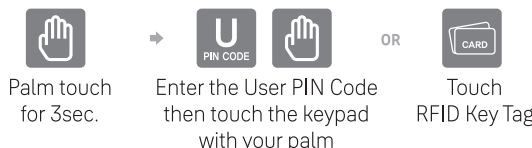


**14. Locking the Door(Inside/Outside)**

**Automatic Lock Mode(Inside/Outside)**  
 5 SEC In automatic lock mode, the lock automatically locked within 5 seconds after closing the door and detecting the automatic lock sensor.

**Manual Lock Mode**  
 The door locks when touching the keypad with the palm. (outside)  
 Use Thumb turn knob on the main body. (Inside)

**15. Automatic/Manual Lock**

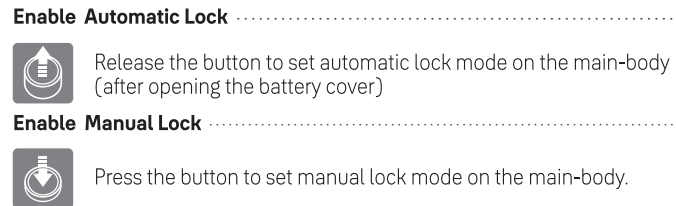

**Bluetooth setting (Yale Access app)**

Registr-ation: (U PIN CODE) (Registration) (7 #) [Set up a new device in the app]

**Remote Controller** (Up to 5 Users)

 
Registr-ation: (U PIN CODE) (Registration) (8 #) (1 #) (SET Button) (#) (\* OR (Registration))

Delete: (U PIN CODE) (Registration) (3 #) (U PIN CODE #) (\* OR (Registration))

**Home Network Controller**

Registr-ation: (U PIN CODE) (Registration) (9 #) (1 #) (Cont roller) (#) (\* OR (Registration))


Delete: (U PIN CODE) (Registration) (3 #) (U PIN CODE #) (\* OR (Registration))



**Please note following when pairing lock with Yale Access App.**


- Depending on product type or FW version, app registration and door lock connection in normal mode may not be possible, so if registration is not possible, change from normal mode to master mode and try again. [App Registration in Master Mode: Master Pin Code-> 1 (Registration Button)-> 7-> # ]
- Because Yale Access Bluetooth App is only available in master mode, user code automatically changes to master code when registering APP in normal mode.
- Please be informed that all registered credentials will be deleted when changing mode or registering and deleting app.

16. Unlocking Door with Fake Code

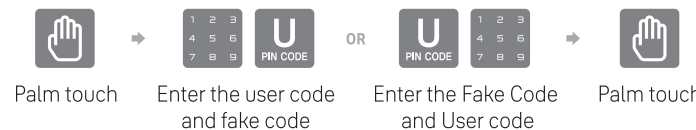

17. External Forced Lock

Enable External Forced Lock : User Code

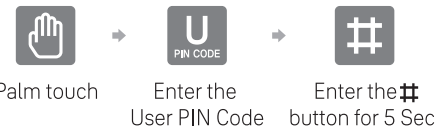

Enable External Forced Lock : RFID Key Tag



Disable External Forced Lock

When the door is unlocked from outside based upon proper authentication, the External forced lock will be released.

18. Volume

The operation sound volume will be adjusted according to the Volume Switch setting.



19. 3 Minute Lock Out

All access mode from the external side are disabled for 3 minutes to deter unauthorized access.

Disable 3-minute Lock Out

- Open with inside door bar.
• Open the door with mechanical key.
• Press I button.

20. Alarm


Intrusion Alarm : The alarm goes off when someone forces the door open. For example, In case of an intrusion by opening a gap in the door while the door is locked.

Broken Alarm(Breakage Alarm) : The alarm goes off when the front part is completely separated from the main set. For example, forced removal of external product (front body).

Turn off alarm

- Enter the registered User code.
• Press I button for 5 seconds.
• Touch the registered RFID Key Tag.

21. Emergency power supply for discharged batteries

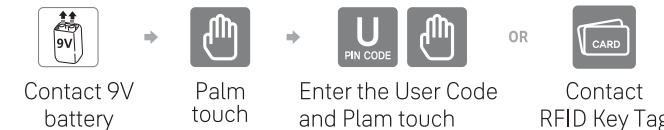

22. Power supply



You must replace all 4 batteries in the following cases:

- \* The Low Battery LED on keypad flickers red.
\* When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM.

23. Code Chart Duplicate if necessary

Table with columns: User Type, User Name, PIN Code. Rows include Master and multiple User slots.

24. Master Mode

Master mode is a mode in which only the administrator can set the door lock and provide access to other users. 100 users passwords, 100 users RFID key tags and individual registration and deletion of one-time passwords enable efficient management of visitors.

Registration and management menu for Master Mode, including options for Switch to master mode, Master Pin Code Change, User Code, RFID Key Tag, Onetime Code, and Delete all credentials.

\* UN User Slot Number should be 2 digits. like '01'...'99' and '00'. Location of 100th user slot must be assigned "00" instead of "100".

25. Important notes

- Do not install the digital door lock in an outdoor environment.
• Do not attempt to disassemble the digital door lock by yourself.
• Do not spray water directly or wipe with chemicals such as benzene, gasoline or alcohol.
• Do not use force with a tool onto the product.
• When using, remember that someone else can see the password.
• Make sure the door is closed properly when going out.

26. Safety and Warning

- Do not install the digital door lock in an outdoor environment.
• Do not attempt to disassemble the digital door lock by your self. By doing so, you may get an electronic shock and damage the product.
• Do not use force with a tool onto the product.
• Make sure to lock the door tight when you go out.
• Be careful not to hit the handle as it may cause injuries.
• Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.
• It is recommended to change User Code on a regular basis.
• In manual lock mode, make sure to double check whether the door is securely locked.
• When External Forced lock is set and unlock the door, the alarm will be activated.
• Do not use rechargeable batteries. Only alkaline batteries are recommended.
• Make sure to follow the above instructions to avoid any injuries.
• It cannot be guaranteed in a special conditions & environment such as water condensation, seaside.
• Warranty will not cover- exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles.



User Guide YDM3115V

RFID Key Tag / PIN Code / Key

Part of ASSA ABLOY

PLEASE READ INSTRUCTIONS BEFORE USE. The functions and design of this product can be changed without prior notice for performance and quality improvement.



Packaging of this product can be recycled.



WEEE Note: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check your local authority or retailer for recycling advice.

